

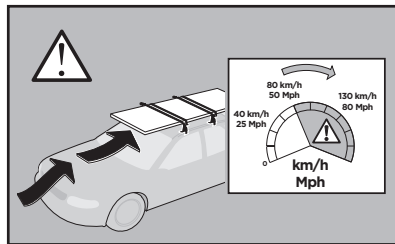
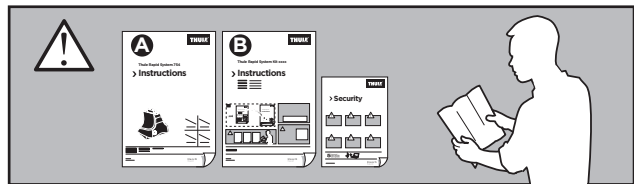


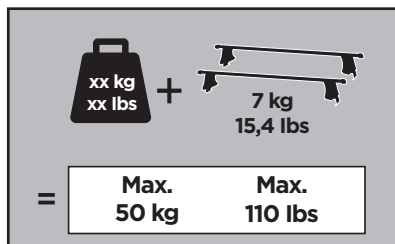

Thule Rapid System Kit 1339

> Instructions

NISSAN Presage, 5-dr MPV, 03-

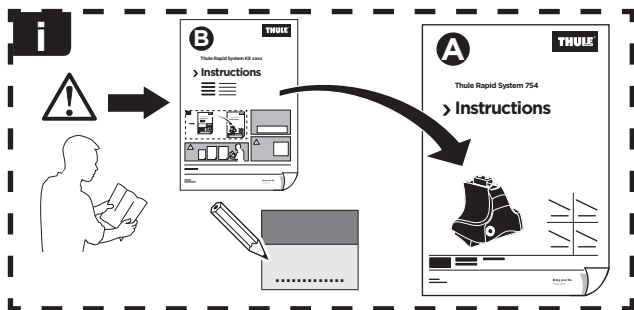

ISO 11154-E


141339

C.20130619
519-1339-01


Bring your life
thule.com



160 x2



19 x2



593 x2



594 x2





x1



x1

1



	X (scale)	X (mm)	X (inch)
NISSAN Presage, 5-dr MPV, 03-	45,5	1106	43 1/2

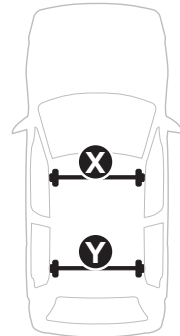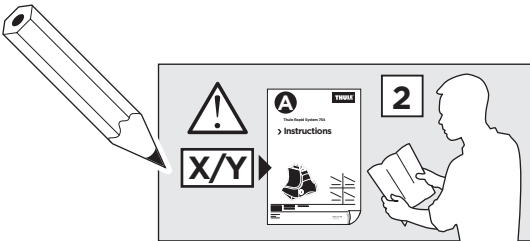


	Y (scale)	Y (mm)	Y (inch)
NISSAN Presage, 5-dr MPV, 03-	36	1011	39 3/4

2

NISSAN Presage, 5-dr MPV, 03-

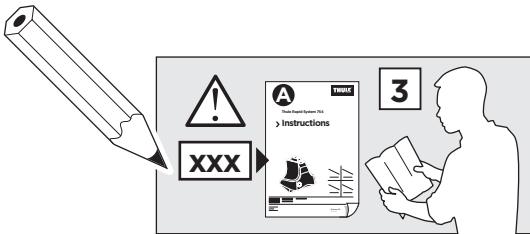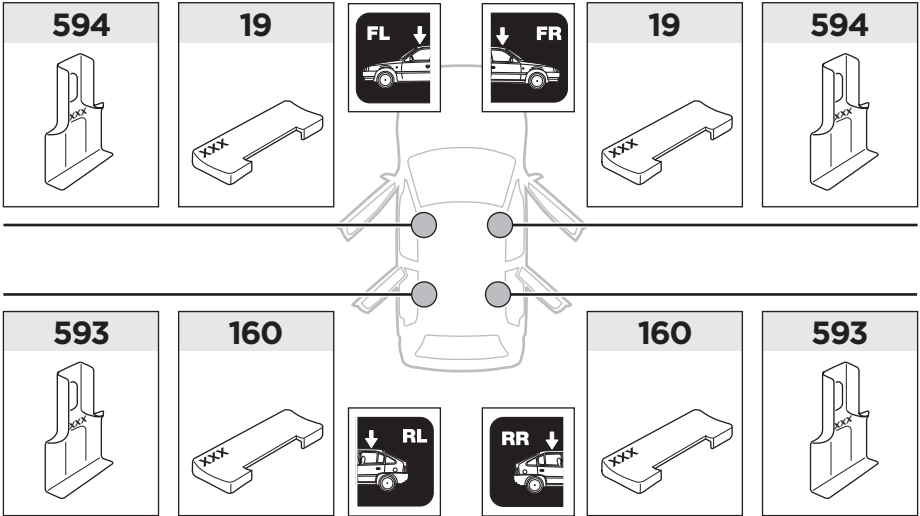

3

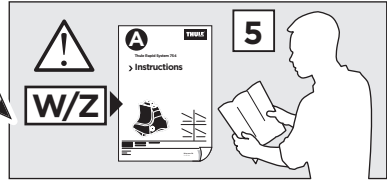

	W (mm)	Z (mm)	W (inch)	Z (inch)
NISSAN Presage, 5-dr MPV, 03-	470	700	18 1/2	27 1/2

